



NOTE: PLEASE VERIFY ALL HEAD AND SILL HEIGHTS. VPI defines the Rough Opening (RO) as the clear opening after all installation and waterproofing materials are applied. It is critical that the RO is a minimum of 1/2" larger than the net window frame size for nail flange applications. In the event that your VPI product will be installed with strap anchors, the RO must be 1" larger than the net frame size of the window. VPI shall not be responsible for any incorrect RO sizes.

**EXTERIOR
ELEVATIONS**

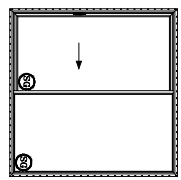


36" CLEAR OPENING MINIMUM
OPERATING SASH WIDTH IS 37"-1/2"

LC-PH20 (62" X 64") END 20 S20

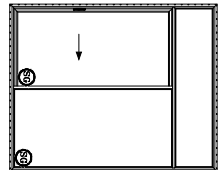

36" CLEAR OPENING MINIMUM
OPERATING SASH WIDTH IS 37"-1/2"




LC-PH30 (66.5" X 120") END 20 S20 TRANSOM

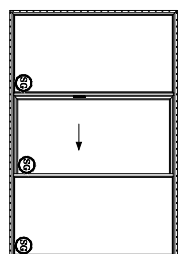


36" CLEAR OPENING MINIMUM
OPERATING SASH WIDTH IS 37"-1/2"

LC-PH40 (144" X 64") END 000 S20

**INTERIOR
ELEVATIONS**

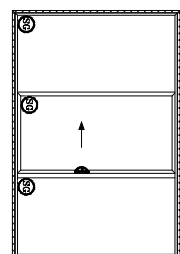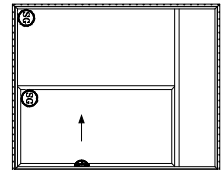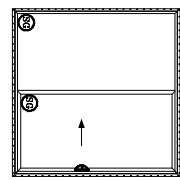

VPI QUALITY WINDOWS
Specialty Vinyl Windows
www.vpiqualitywindows.com



ENDURANCE

START DATE: 12/15/23
FINISH DATE: 12/15/23
CHECKED BY: ENGINEERING
SCALE: 3/4"=1'
DWG BY: BSP
QUOTE:
REVISION:
PAGE 1 OF